




Mounting Holes 10" Center to Center

Transom Mounting Template

IMPORTANT: This template will position the Remote-Troll at the proper height for most boats. If you plan to use a trolling motor with 15" shaft in rough waters with large waves or swells (i.e. ocean or Great Lakes), you may want to mount the Remote-Troll 1-2" lower or consider using a kicker with 20" shaft. **PLEASE** make this determination **before** drilling any holes in your boat.

INSTRUCTIONS

1. **ALWAYS** dry-fit before drilling to ensure proper height.
2. Locate and drill top two holes using 25/64" drill.
3. Install mounting brackets finger tight using top holes.
4. Set Remote-Troll into brackets, adjust fit, mark location and drill bottom holes using 25/64" drill.
5. Install brackets sealing bolts/holes using waterproof sealant.

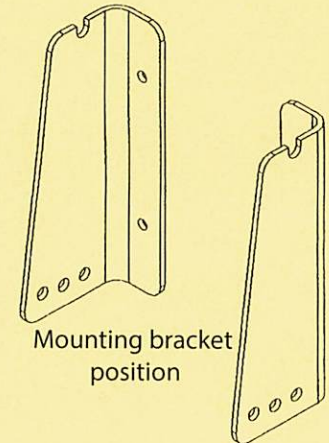

Position bottom of this template 1" above the water line for 15" -shaft trolling motors and 6" above the water line for 20" -shaft motors.

**BOTTOM OF
TEMPLATE**



Questions? Please call us toll-free at 800-584-6943 **before** drilling.